



Zubehör | Cupholder



## The CupIN.

Convenient cupholder for different arm rest widths.

The Aguti CupIN - available as B58 and B75 - is a convenient cupholder which can be adapted on the arm rest without any effort. So bottles, cups or cans are always ready to hand. The combination of ceramic-coated metal and black polyamide gives the CupIN its compact and stable properties. The CupIN B75 fits perfectly on armrests of the Aguti seats GIS-Liner, Milan, Lounge und Deluxe, the other B58 was specially developed for narrow armrests of the original seats.





---

*„Adaptable on different kinds of arm rests.“*

- **Easy mounting**  
with simple velcro fastening strap
- **Drinks immediately within reach**  
by directly affixing at the armrest
- **High quality manufactured**  
in a combination of ceramic-coated metal and black polyamide



#### Technical data

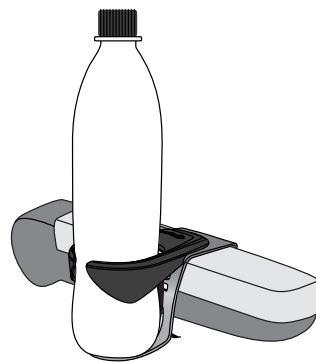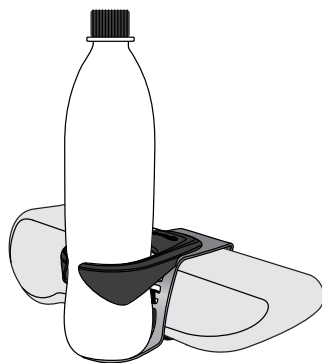

**CupIN B75** (or broad armrests)


**CupIN B58** (for narrow armrests)

|                |   |  |
|----------------|---|--|
| Dimensions     | W 88 x D 165 x H 96 mm  | W 88 x D 148 x H 96 mm   |
| Weight         | 220 g   | 210 g  |
| Material       | PA6, Metall beschichtet, PPS  | PA6, Metall beschichtet, PPS   |
| Colours        | titanium, bronze, anthrazit   | titanium   |
|                |  |  |
| Armrest width  | B 60 – <b>75</b> mm (max.)<br>H 45 mm (min.)  | B <b>58</b> mm (max.)<br>H 45 mm (min.)  |
| Container size | Ø 65 – 80mm   | Ø 65 – 80mm  |

---

## Instructions for use

- 1 Thread velcro strap through the appropriate inside bars with the smooth side up
- 2 Place CupIn on the armrest and wind the strap around it
- 3 Pull velcro strap tight and fasten
- 4 Insert drink container

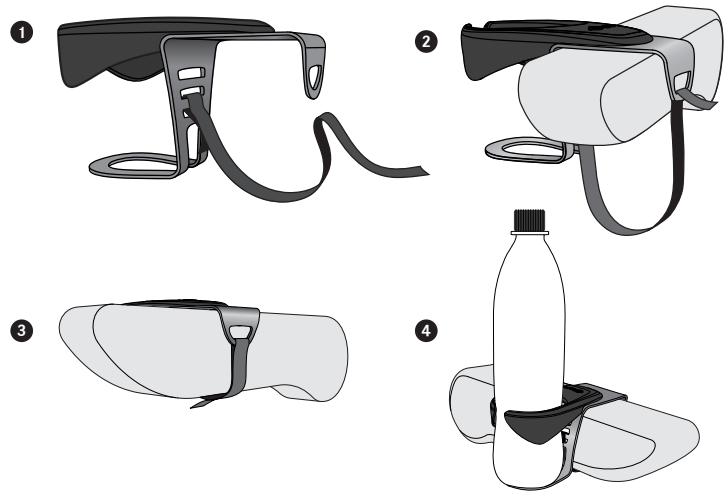

---

## Supplied items

- CupIN
- Velcro fastening strap
- User instructions





---

Make a nonbinding request for the CupIN under: [info@aguti.com](mailto:info@aguti.com)  
Further information and products on: [www.aguti.com](http://www.aguti.com)

---